

Rock IT!



x3 15VAAA
ALKALINE BATTERIES
REQUIRED NOT INCLUDED.



Get the free FURBY app!

Available on the
App Store

Works with iPad®,
iPad touch® & iPhone®
- iOS 4.2 or later
required.

Not all functions of the app work with older devices.

AGES
6+

Furby

PARTY ROCKERS

KEEP THE PARTY GOING!

PARTY ROCKERS creatures are born
with attitude and won't let anyone change them.
But you should know, they LOVE parties...

The more you rock **PARTY ROCKERS**, the wilder they get!



Play some tunes!



Pull some tails!



Talk, sing,
make noise...


...AND KEEP ON ROCKING IT!

Put **PARTY ROCKERS** and **FURBY** together
for an **AWESOME** party!

FURBY and
PARTY ROCKERS
each sold separately.



- Keep FURBY PARTY ROCKERS away from bathtubs, pools, oceans and all wet, watery places.
- Did your FURBY PARTY ROCKERS creature get some taco sauce on its fur? Just wipe it with a clean damp cloth. Even better, since FURBY PARTY ROCKERS are fussy about their fur, keep them away from food and drinks.

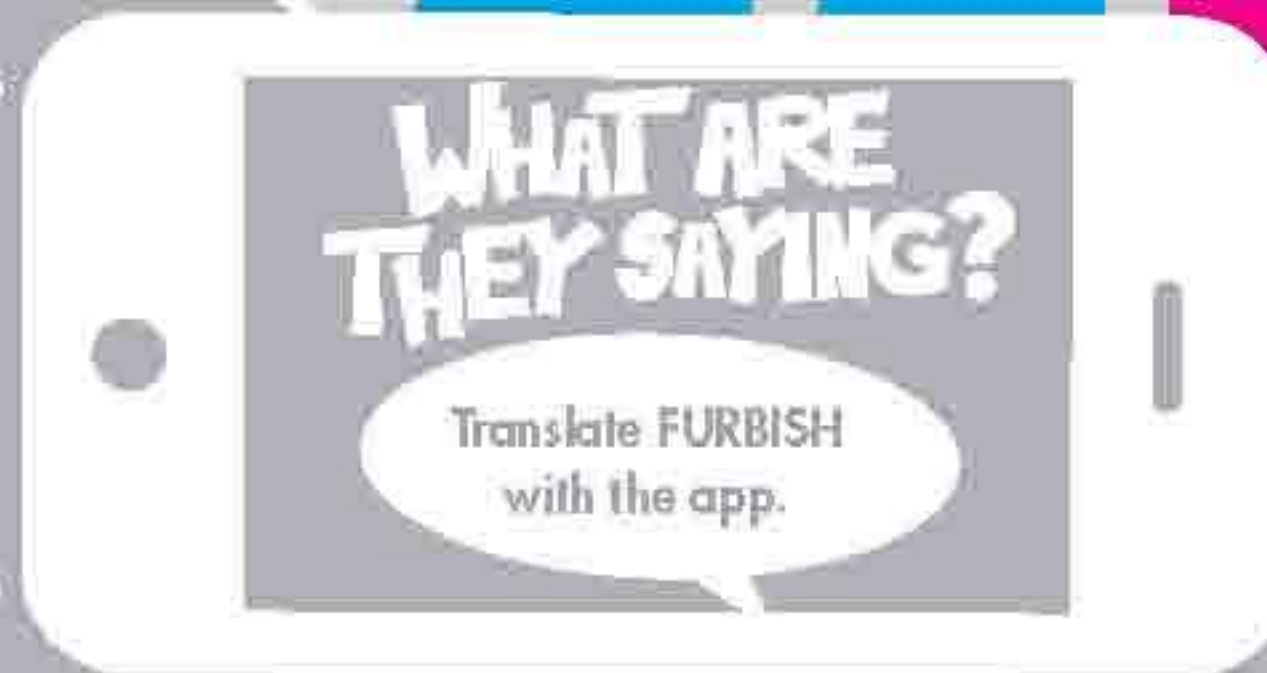

Check out the complete FURBISH™ dictionary at
www.furby.com

NEED PARTY SNACKS?

Feed PARTY ROCKERS
from the app.



FURBY PARTY ROCKERS HELPFUL HINTS:

WHAT'S WRONG?

Your FURBY PARTY ROCKERS creature is acting weird!

Your FURBY PARTY ROCKERS creature is ignoring its friends. Why the attitude?

The music is playing - why isn't your FURBY PARTY ROCKERS creature doing anything?

WHY?

Your FURBY PARTY ROCKERS creature may need new batteries.

Your FURBY PARTY ROCKERS creature can't see the other FURBY PARTY ROCKERS creatures or FURBYS.

Your FURBY PARTY ROCKERS creature is too far away from its friends.

Your FURBY PARTY ROCKERS creature can't hear the music.

WHAT SHOULD I DO?


Press the REFRESH BUTTON, and power up your creature with some fresh batteries.

FURBYS and FURBY PARTY ROCKERS like to see each other when they're together, so make sure they're face-to-face.

Team huddle! FURBYS and FURBY PARTY ROCKERS have their own idea about personal space. Bring them closer together.

Crank those tunes!

NOTE: If these solutions do not resolve the issue, please contact Hasbro Customer Service at 1-800-327-8264. In the U.K. please call 00800 22 42 72 76.

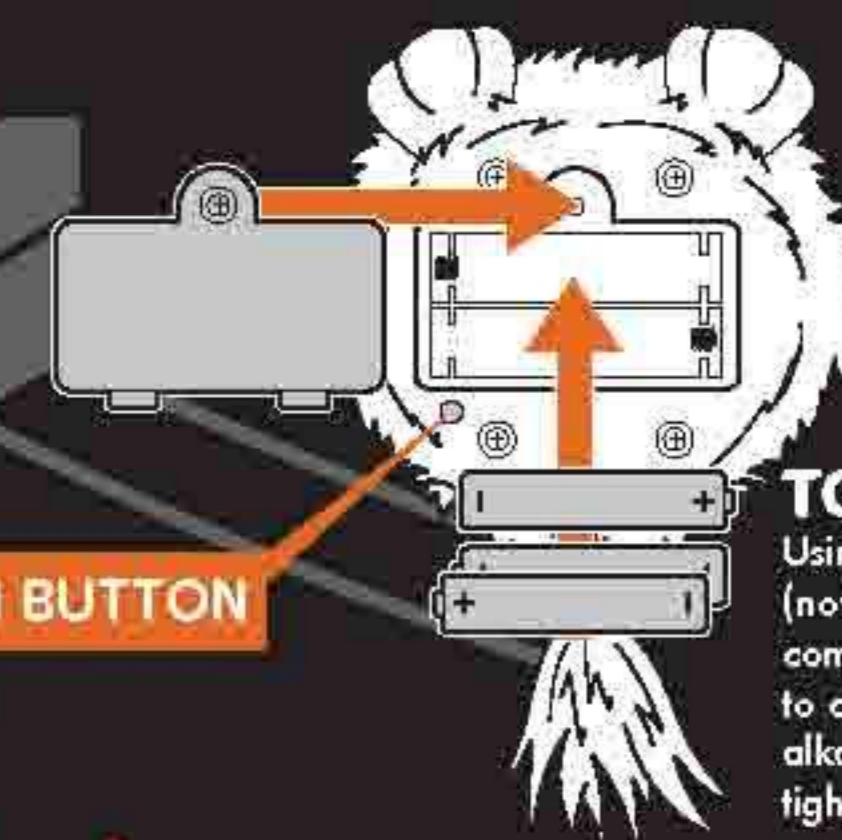

TO INSERT BATTERIES:

Using a Phillips/cross head screwdriver (not included), loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 3 x 1.5V AAA alkaline batteries. Replace cover and tighten screw.

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
- TO AVOID BATTERY LEAKAGE
 - Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - Remove exhausted or dead batteries from the product.
 - Remove batteries if product is not to be played with for a long time.
 - Do not short-circuit the supply terminals.
 - RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FURBY APP HELPFUL HINTS:

Works with iPad®, iPod touch® & iPhone® - iOS 4.2 or later required. Not all functions of the app work with older devices.

WHAT'S WRONG?

Your FURBY PARTY ROCKERS creature isn't responding to the FURBY app.

The FURBY app on your iPad®, iPod touch® or iPhone® isn't reaching your FURBY PARTY ROCKERS creature.

WHY?

Your FURBY PARTY ROCKERS creature can't hear it.

The device is too far away from your FURBY PARTY ROCKERS creature.

WHAT SHOULD I DO?

Move your FURBY PARTY ROCKERS creature closer to the device.

Move your FURBY PARTY ROCKERS creature closer to the device.

NOTE: Hasbro is not responsible for any content distributed through the App Store, except for Hasbro-generated content. Please refer to Apple Inc.'s terms and conditions for further information. Questions: Call 1-800-327-8264. In the U.K. please call 00800 22 42 72 76.



A3189/A3187 Asst.
 Product and colors may vary.
 iPad, iPod touch and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.
 ® and/or TM & © 2012 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks.
 Manufactured by Hasbro SA, Rue Emile-Boecher 31, 2800 Delemont, CH.
 Represented by Hasbro Europe, 2 Roundwood Ave, Stockley Park, Uxbridge, Middlesex UB11 1AZ, UK.
 U.S. Patent Nos. 6,160,986; 6,514,117; 6,959,166; 6,773,344; 6,356,967 & Pat. Pend.
 Reg. Des. Nos. EC001334866-0003 & BR 30 2012 001772-6 & CN Reg. Des. App. PN:7323080001



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.
 Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in a household waste bin.

