PREPARING FURBY FOR A NAP

SCIRONIC! Sleepy Time Bed

INSTRUCTION MANUAL

Furby is reminded of his cloud home each time he sleeps in his cloud bed. Now you can gently rock Furby or Furby Babies to sleep with the Sleepy Time Bed. The fluffy cloud pillow has a soft place for Furby to rest. Use the safety belt to buckle Furby in place so he doesn't fall out. Place Furby into the bed, move the handle into "sleepy time" position and press the "sleepy time" button. Furby will gently fall asleep!


1. The handle must be in the "up" position.



2. Place Furby or Furby Babies into the bed. Make certain Furby is facing forward, or toward you. The bed will not make Furby go to sleep if Furby is facing in the wrong direction.



GRETTING STARTED

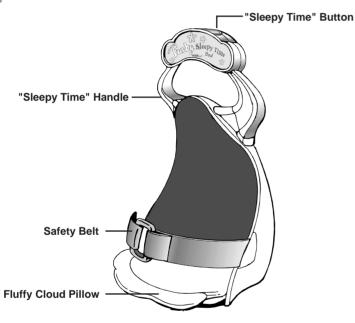

3. Buckle the safety belt by threading the right strap through the loop on the left strap. Fold the right strap over the buckle and press the end against the strap. This will securely hold Furby.



4. Move the handle to the "sleepy time" position.





Furby Babies

BATTERY INSTALLATION

 
CAUTION: Battery installation and replacement should be done by an adult.

Carefully loosen the battery door screw and open the battery compartment door located on the back side of the handle. Insert the batteries, making sure to align the "+" and "-" signs as shown. Close the battery compartment door and tighten the screw. Do not over-tighten as this may cause damage.





5. Press the "sleepy time" button when Furby is NOT speaking or moving. Furby cannot be speaking or moving when the "sleepy time" button is pressed or Furby will not respond to the nap command.



Requires 2 "AAA" batteries(not included)

- To ensure proper function:
 Do not mix old and new batteries
- Do not mix alkaline, standard or rechargeable batteries
- Battery installation should be done by an adult
- Non-réchargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy before being charged (if removable)
 - Rechargeable batteries are only to be charged under adult supervision
- (if removable) Only batteries of the same or equivalent type as recommended are
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short circuited
- Replace with new batteries at the first sign of erratic operation

6. You will hear Furby fall asleep.



NOTE: Keep the handle in the DOWN position until Furby completely falls asleep. Moving the handle to the UP position before Furby falls asleep may cause Furby to wake up.

SCAUTION/DEFECT OR DAMAGE



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of soft dry cloth.

Replace batteries at the first sign of erratic operation.

If a part of your bed is damaged or something has been left out, DO NOT RETURN THE BED TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

parts. Instead, write to us at: Tiger Repair Department 1000 N. Butterfield Road, Unit 1023 Vernon Hills, IL 60061, U.S.A.

Please include a note with your return explaining the problem along with a sales slip, date, place of purchase and price paid. We will do our best to expedite your return promptly.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$5.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department 1000 N. Butterfield Road, Unit 1023 Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our Web Site at: www.tigertoys.com

