

PLAYSKOOL


R.C. ROBOT

Preschool Radio Control

CAUTION: Hair entanglement may result if child's head is too close to motorized unit of this toy. Adult supervision required.


What's needed: One 9 volt alkaline battery, 4 "AA" alkaline batteries, Phillips* screwdriver.

BATTERY PLACEMENT (ROBOT)

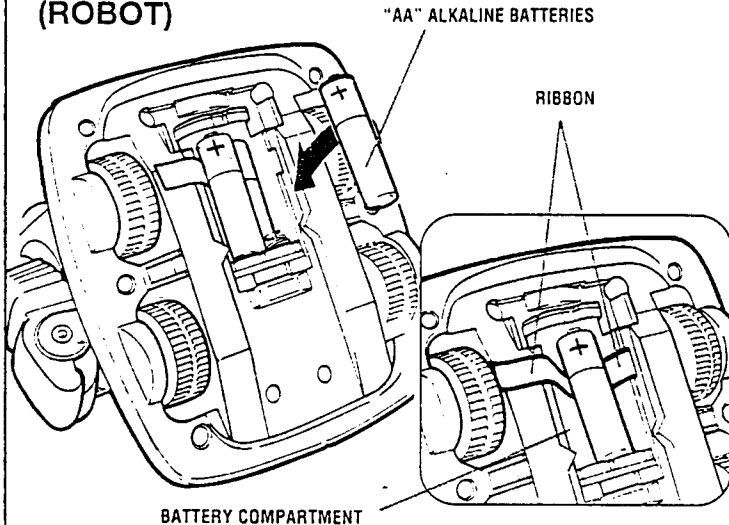

1. Loosen screw on battery compartment cover, then slide out and remove cover.
2. Place 4 "AA" alkaline batteries into compartment, in the direction shown on bottom of compartment. Note: Make sure batteries are placed on top of ribbon (see inset). This allows for easy removal of batteries by pulling up on ribbon end.
3. Slide and snap battery compartment cover in place and retighten screw.

BATTERY PLACEMENT (CONTROLLER)

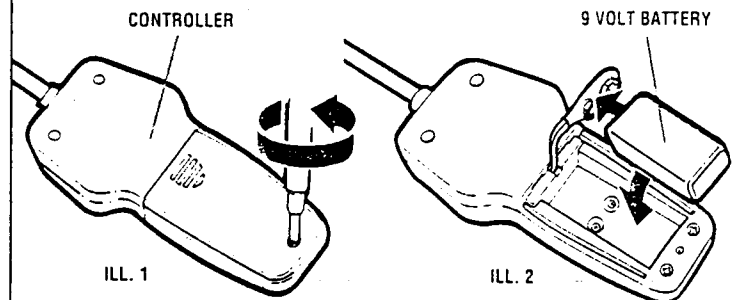

1. Loosen screw on battery compartment cover, and remove cover (ILL. 1).
2. Line up 9 volt battery contacts with clips on end of wire and snap together. Fit battery into compartment (ILL. 2).
3. Replace cover and retighten screw.


Note: The 9 volt battery in the controller has a longer life than the "AA" batteries in the robot. The robot batteries will probably need to be changed two or three times before changing the controller battery for the first time.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if stored for a long period of time.

TO OPERATE

1. To activate the robot, remove the controller from the robot's back and press the button on the front of the robot. This enables the robot to respond to radio control signals. (ILL. 1) Note: When you push the button, the robot's chest light will briefly flash, indicating the robot is activated.
2. To operate the robot, press and hold down the button on the controller (ILL. 2). With each press of the button, the robot will alternate between moving ahead in a straight line, and rotating in place. When you let go of the button, the robot will stop.
3. To make the robot move in a certain direction, press the controller button so that the robot rotates in place, then let go of the button when the robot is facing the desired direction. Press the button again, and the robot will move straight ahead in the direction it's facing.
4. When the robot is moving, the lights flash and the robot makes two sounds. For quiet play, parents can turn off the sounds. The sound switch is located in the robot's battery compartment (ILL. 3). When the switch is in the "off" position, the lights will continue to flash.
5. You can shut off the robot in three ways: (1) Place the controller on the back of the robot, and the robot will immediately shut off (ILL. 4). (2) Press the button on the back of the robot to shut it off (ILL. 5). (3) The robot will automatically shut off if not in use for 1-3 minutes. To start the robot again, simply press the button on the front of the robot.
6. The robot has poseable arms and hands that spring closed to grip small objects. To make the robot grip an object, open the robot's hand and place the object in its hand. When you release the robot's hand, it will spring closed and hold the object (ILL. 6).

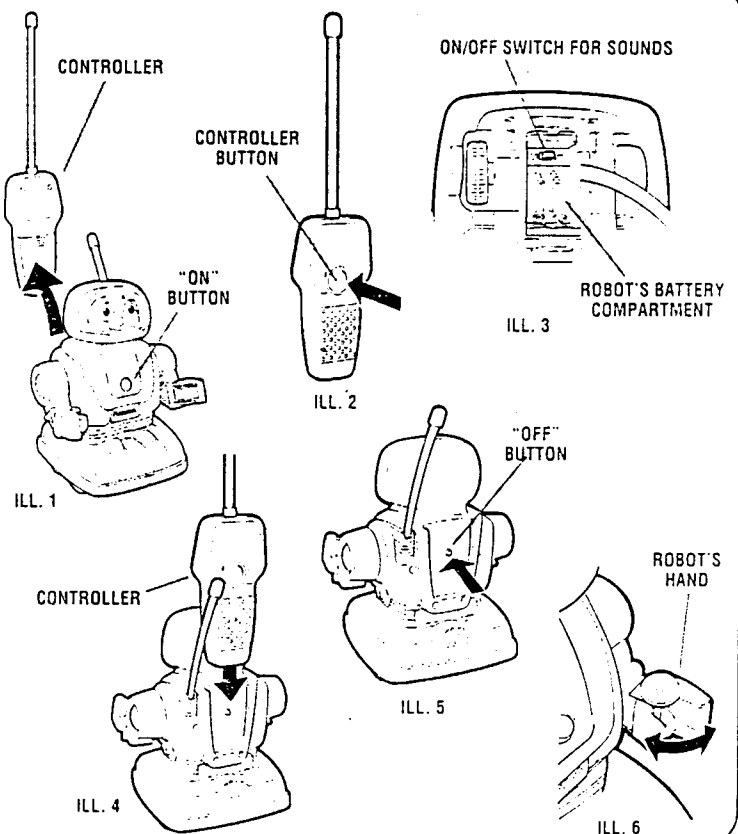

WHERE TO OPERATE THE ROBOT

The robot will run on any hard, flat surface. For instance, indoors it will run on linoleum, tile, wood and low-pile carpeting; outdoors it will run on asphalt, cement and slate. **DO NOT RUN THE ROBOT ON SAND, WHICH COULD CAUSE DAMAGE TO THE ROBOT.**

OPERATING RANGE

1. As a general guideline, the controller can operate the robot from a distance of about 10-12 feet. The range will increase outdoors. However, the range may be shortened and performance affected by such factors as the structure of the house (if used indoors) and the nearness of metal objects.
2. The robot may operate erratically if it is used near metal objects, or if the controller is positioned less than 10 inches from the robot.

PROBLEM CHECKLIST

If the robot is not functioning properly, first check to see that:

- The activating button on the front of the robot has been pressed.
- The controller is within operating range of the robot.
- The batteries are correctly positioned.
- The robot is being operated in temperatures between 40°F and 95°F. The robot will not function at all if its temperature is below 35°F or above 105°F. If the robot has been stored in extremely cold or hot temperatures, allow time for it to reach temperature at which it will operate properly.

CHECK OR CHANGE THE BATTERIES WHEN . . .

(ROBOT)

1. The robot's normal operating speed slows down considerably.
2. After letting go of the controller button, the robot continues to move.

(CONTROLLER)

1. The robot stops and does not respond to the controller. Note: This will also occur if the robot is near metal objects, which cause interference. Before changing batteries, move the robot away from metal objects and see if it operates.

ERRATIC OPERATION CAN BE CAUSED BY INTERFERENCE FROM . . .

1. Radio control vehicles in the area that operate on 49 MHz.
2. Signals sent from infant monitors.
3. Metal objects such as appliances, baseboard heating and metal fences.

CAUTION: Changes in modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


FCC STATEMENT

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to television or radio reception. It has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

If you have any questions, comments, or need additional information concerning this product or its parts, please call our Playskool Consumer Service hotline at 1-800-PLAYSKL (1-800-752-9755), Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

All written inquiries should be mailed to: Playskool Consumer Service Department
P.O. Box 200
Pawtucket, Rhode Island 02862-0200



For future reference, our toll-free consumer service number is also located on this product.